

WARRANTY

ORP **Pronto** HI 982401 is warranted for two years against defects in workmanship and materials when used for their intended purpose and maintained according to instructions. The electrode is warranted for a period of one year. This warranty is limited to repair or replacement free of charge.

Damages due to accident, misuse, tampering or lack of prescribed maintenance are not covered.

If service is required, contact the dealer from whom you purchased the instrument. If under warranty, report the model number, date of purchase, serial number and the nature of the failure. If the repair is not covered by the warranty, you will be notified of the charges incurred. If the instrument is to be returned to Hanna Instruments, first obtain a Returned Goods Authorization Number from the Customer Service department and then send it with shipment costs prepaid. When shipping any instrument, make sure it is properly packaged for complete protection.

To validate your warranty, fill out and return the enclosed warranty card within 14 days from the date of purchase.

All rights are reserved. Reproduction in whole or in part is prohibited without the written consent of the copyright owner, Hanna Instruments Inc.

PRINTED IN PORTUGAL. I582401R1 05/99


Hanna Instruments reserves the right to modify the design, construction and appearance of its products without advance notice.

Instruction Manual

Pronto
ORP

(HI 982401)

**On-line, Waterproof
ORP meter with Alarm**

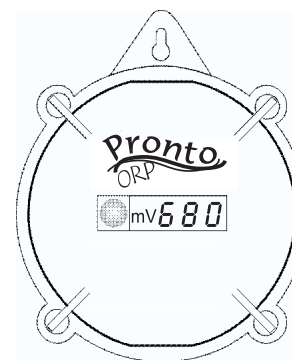

HANNA
instruments

<http://www.hannain.com>

CE

This Instrument is in
Compliance with the
CE Directives

Dear Customer,

Thank you for choosing a Hanna product. This manual will provide you with the necessary information for a correct operation. Please read it carefully before using the meter. If you need additional technical information, do not hesitate to e-mail us at techserv@hannacan.com.

These instruments are in compliance with the CE directives EN 50081-1 and EN 50082-1.

PRELIMINARY EXAMINATION

Remove the instrument from the packing material and examine it carefully. If any damage has occurred during shipment, immediately notify your Dealer or the nearest Hanna Customer Service Center.

The meter is supplied with:

- **HI 3286** ORP electrode;
- Screwdriver;
- 12 VDC power adapter.

Note: Conserve all packing material until the instrument has been observed to function correctly. Any defective item must be returned in its original packing.

GENERAL DESCRIPTION

ORP *pronto* **HI982401** is an ORP meter specially designed to meet the needs of monitoring ORP such as in swimming pools. The housing has been completely sealed against vapors and humidity with IP54 rating. The *pronto* simply hangs above the application.

The **HI 3286** gel-filled ORP electrode is interchangeable and the BNC connector is protected behind a waterproof sheath. The unique design of the electrode provides longer life even in harsh conditions.

ACCESSORIES

HI 3286	Double junction, plastic body ORP electrode with 2 m (6.6') cable and BNC connector
HI 7020M	ORP 200/275 mV solution, 230 mL
HI 7020L	ORP 200/275 mV solution, 460 mL
HI 7091M	Reducing solution, 230 mL
HI 7091L	Reducing solution, 460 mL
HI 7092M	Oxidizing solution, 230 mL
HI 7092L	Oxidizing solution, 460 mL
HI 7061L	Electrode cleaning solution, 460 mL bottle
HI 710005	12 VDC power adapter, US plug
HI 710006	12 VDC power adapter, European plug
HI 710012	12 VDC power adapter, Australian plug
HI 710013	12 VDC power adapter, Southern Africa plug
HI 710014	12 VDC power adapter, UK plug

CE DECLARATION OF CONFORMITY


Recommendations for Users

Before using this product, make sure that it is entirely suitable for the environment in which it is used. Operation of this instrument in residential areas could cause unacceptable interferences to radio and TV equipment.


During operation, ESD wrist straps should be worn to avoid possible damage to the electrode by electrostatic discharges.

Any variation introduced by the user to the supplied equipment may degrade the instrument's EMC performance.

To avoid electrical shock, do not use this instrument when voltages at the measurement surface exceed 24 VAC or 60 VDC. To avoid damages or burns, do not perform any measurement in microwave ovens.


CE DECLARATION OF CONFORMITY
We, Hanna Instruments Srl Via E. Fermi, 10 35030 Sarmeola di Robano (PD) ITALY hereby certify that the ORP meter HI 982401 has been tested and found to be in compliance with the following regulations: IEC 801-2 Electrostatic Discharge IEC 801-3 RF Radiated IEC 801-4 Fast Transient EN 55022 Radiated, Class B EN 61010-1 Electrical Safety
Date of Issue: 23.04.1999 D. Volpato - Engineering Manager On behalf of Hanna Instruments S.r.l.

- With a small screwdriver adjust the setpoint trimmer to display the desired value in the 200 to 900 mV range (e.g. 680 mV).

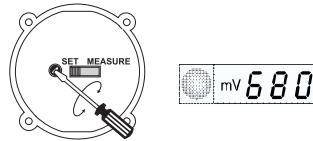

- Make sure the switch is moved back to the right (MEASURE Mode).



- Replace the rear panel and the gasket, making sure that the unit is properly closed.



- Whenever the mV reading is lower than the setpoint, the red alarm LED blinks to warn the user.

Maintenance:

To minimize clogging and provide longer life for the ORP electrode, it is recommended to clean it monthly. Immerse the tip of the electrode in **HI 7061** for one hour and then rinse it with tap water.

Check the ORP *Pronto* accuracy by immersing the electrode in HI7020 ORP solution. The reading should be between 200 and 275 mV at 20°C (68°F).

Otherwise clean the platinum tip of the electrode by rubbing it with a soft cotton or lint-free cloth soaked with **HI7061** cleaning solution.


After the cleaning, condition the ORP electrode by leaving it in a pretreatment reducing (**HI7091**) or oxidizing (**HI7092**) solution half an hour.

The alarm setpoint is adjustable and the user is alerted if the ORP value is out of range by a red light.

The meter is factory calibrated and does not need recalibration.

You no longer need to worry about battery changes either: the unit runs without interruption on 12 VDC power supply.

FUNCTIONAL DESCRIPTION

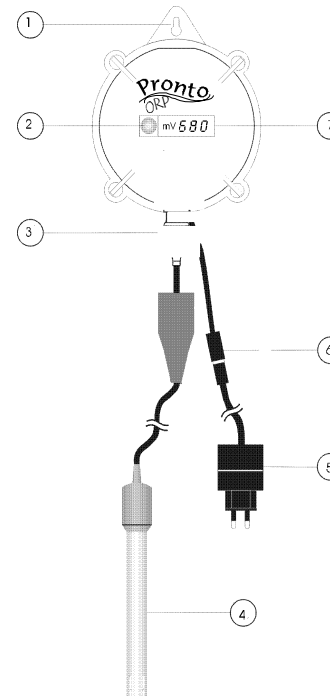

1. MOLDED EYE
2. ALARM LED
3. BNC CONECTOR
4. HI 3286 ORP ELECTRODE
5. 12 VCD POWER ADAPTER
6. PROTECTIVE SHEATH
7. LIQUID CRYSTAL DISP

SPECIFICATIONS

HI 982401 ORP Yonko


Range	±999 mV
Resolution	1 mV
Accuracy (@20°C/68°F)	±5 mV
Typical EMC Deviation	±5 mV
Setpoint	200 to 800 mV
Alarm	LED blinks when the measured ORP value is lower than the setpoint
Calibration	Factory calibrated
Probes	HI 3286 interchangeable ORP electrode (included)
Casing	IP54
Power supply	External 12 VDC (included)
Dimensions	86 x 94 x 33 mm (3.4 x 3.7 x 1.3")
Weight	150 g (5.3 oz.)

OPERATIONAL GUIDE

ORP electrode CONNECTION

The BNC connector is protected against vapors and humidity by a waterproof sheath.

- Slide the protective sheath down. Connect the **HI 3286** ORP electrode to the BNC connector and then slide up. Make sure the connector is completely covered.
- Do not be alarmed if white crystals appear around the electrode protective cap. This is normal with ORP electrodes and they dissolve when rinsed with water.
- When not in use, rinse the electrode with water to mini-

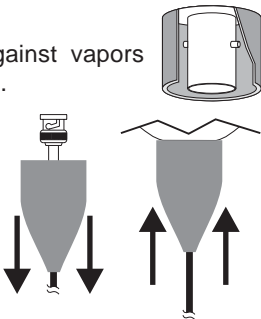

3


mize contamination and store it with a few drops of storage (**HI70300**) solution in the protective cap. Always replace the protective cap after use.

DO NOT USE DISTILLED OR DEIONIZED WATER FOR STORAGE PURPOSES.

- If the electrode has been left dry, soak the tip in a storage (**HI70300**) solution for at least one hour to reactivate it.

Taking ORP Measurements

- Turn the meter on.
- Remove the protective cap from the ORP electrode and immerse the tip (4 cm/1½") in the sample.
- The LCD will show the ORP value to be measured in mV. Allow the reading to stabilize and **HI982401** will start continuous monitoring.

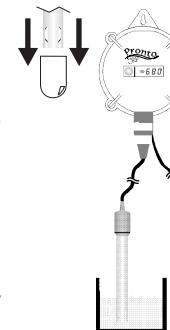


Note: to prevent damages to the meter, remove the ORP electrode from the sample before turning the meter off.

Adjusting the Setpoint

You can select your own alarm setpoint.

- Unscrew and remove the rear panel and gasket seal to access the MEASURE/SET switch and the setpoint adjustment trimmer.
- Move the switch to the left (SET).

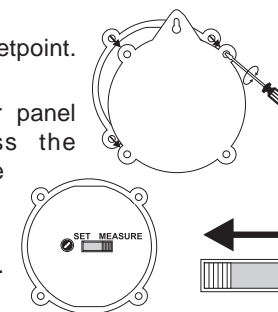

4