

## Instruction Manual

# HI 3831T Total Chlorine Test Kit

  
www.hannainst.com

Dear Customer,  
Thank you for choosing a Hanna Product.  
Please read the instructions carefully before using the chemical test kit. It will provide you with the necessary information for correct use of the kit.

Remove the chemical test kit from the packing material and examine it carefully to make sure that no damage has occurred during shipping. If there is any noticeable damage, notify your Dealer or the nearest Hanna office immediately. Each kit is supplied with:

- 1 Color Comparator Cube;
- Reagent 1 (20 mL);
- Reagent 2 (20 mL);
- Reagent 3 (20 mL).

Note: Any damaged or defective item must be returned in its original packing materials.

12/99 PRINTED IN ITALY  
ISTR3831T

## SPECIFICATIONS

Range	0 to 2.5 mg/L (ppm) Chlorine
Smallest Increment	0.5 mg/L (ppm) Chlorine
Analysis Method	Colorimetric
Sample Size	5 mL
Number of Tests	50 (average)
Case Dimensions	220x145x55 mm (8.7x5.7x2.1")
Shipping Weight	205 g (7.7 oz.)

## SIGNIFICANCE AND USE

In pools and drinking water supplies, chlorination serves to kill or deactivate disease-producing microorganisms. It can also improve water quality by reacting with ammonia, iron, sulfide and some organic substances. However, an excess concentration of chlorine in water can produce adverse conditions, such as formation of carcinogenic chloroform or other toxins. To maximize the purpose for chlorination and minimize any adverse effects, it is essential to monitor the chlorine levels closely.

The Hanna Chlorine Test Kit determines the Total Chlorine concentration in water via a color cube. This makes the test kit practical for field use. No iodine or bromine can be present for this test to work properly.

## CHEMICAL REACTION


The addition of chlorine to water produces hydrochloric and hypochlorous acids. The hypochlorous acid acts as the disinfectant and bleaching agent. The formation of chloramines and nitrogen trichloride will occur if ammonia is present. These are known as bound chlorine. Total chlorine is measured by a colorimetric method.

The reaction is buffered at approx. 6.3 pH; in presence of an excessive quantity of iodide ions, the DPD (N-diethyl-p-phenylenediamine) is oxidized by chlorine producing a reddish color. The color intensity of the solution determines the total chlorine concentration.


## INSTRUCTIONS

READ THE ENTIRE INSTRUCTIONS BEFORE USING THE KIT

- Add 5 drops of Reagent 1, 2 drops Reagent 3 and 3 drops of Reagent 2 to the color comparator cube.

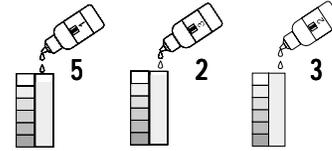

- Fill the color comparator cube with water sample to the 5 mL mark.



- Replace the cap and mix by carefully swirling the cube in tight circles and inverting it several times.



- Determine which color matches the solution in the vessel and record the results in mg/L (ppm) total chlorine.



## BOUND CHLORINE

The concentration of bound chlorine in the sample is determined by subtracting the Free Chlorine (HI 3831F) result from the Total Chlorine result (HI 3831T).