


**Wall-Mounting Precision Thermometer with Cal-Check**

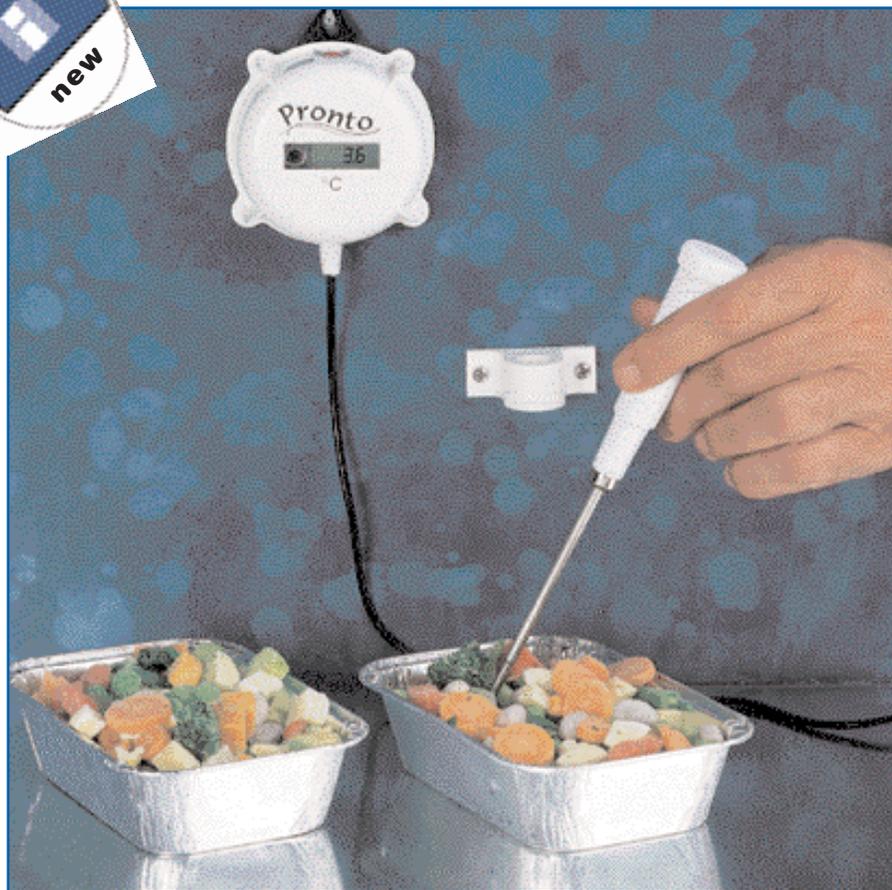

HI 146-00, HI 146-01 and the new waterproof HI 146-99 are high accuracy thermometers with a professional probe and a 2 meter (6.6') cable. They also incorporate the exclusive Cal-Check feature which allows you to double-check the accuracy of the meter any time.

The design and the characteristics of the meters together with a stainless steel probe and an optional probe holder make these thermometers ideal for controlling the temperature of liquids, semisolids and refrigerated foodstuffs. HI 146-00 and HI 146-99 can be installed easily in a fixed position utilizing the molded eye, as well as the probe holder, or it can be hung with a lanyard right where it is most needed. This way, the meter can monitor the exact temperature of any product continuously and show it on a large LCD display.

**Accurate Measurements with the Cal-Check® Feature**

In order to make sure that the meter is reporting the correct temperature, HI 146 has been designed with Hanna's exclusive Cal-Check® switch. By simply setting the switch from "READ" to "TEST" and without requiring any external equipment, users can ensure the accuracy of the meter. In the "TEST" mode, HI 146 shows 0.0 °C (or 32.0°F) ±0.3°C (±0.5°F) which is the accuracy of the meter. With this Hanna innovation, the accuracy can be checked throughout the life of the thermometer without requiring any accessories or additional investments.

**Specifications**

	HI 146-00	HI 146-01	HI 146-99
<b>Range</b>	-50.0 to 150.0°C	-58.0 to 302.0°F	-50.0 to 150.0°C
<b>Resolution</b>	0.1°C	0.1°F (-58.0 to 199.9 °F) 1°F (200 to 302 °F)	0.1°C
<b>Accuracy</b>	±0.3°C (-20 to 90°C) ±0.5°C (outside)	±0.5°F (4 to 194°C) ±1°F (outside)	±0.3°C (-20 to 90°C) ±0.5°C (outside)
<b>Probe (fixed)</b>	stainless steel, 160 x dia 3 mm (6.3 x dia 0.1"), 2 m (6.6') cable		
<b>Battery type/life</b>	1 x 1.5V AA / approx. 5 years		
<b>Environment</b>	0 to 50°C (32 to 122°F); RH max 95% 0 to 50°C; RH max 95% 0 to 50°C; RH max 100%		
<b>Dimensions</b>	86 x 110 x 43 mm (3.4 x 4.3 x 1.7")		
<b>Weight</b>	150 g (5.3 oz.)		

**Accessories**

HI 750146 Wall-mounted probe holder

**Ordering Information**

HI 146-00, HI 146-01 and HI 146-99 are supplied complete with probe, battery and instructions.