



HI 146 Wall-Mounting Precision Thermometer – Ideal for QC

HI 146 is an accurate thermometer with *Checktemp*® series high specs, professional stainless steel probe and a two meter (6.6') cable. The design and characteristics of HI 146, its penetration probe and the optional probe holder render it particularly useful for controlling the temperature of liquids, semisolid and refrigerated foodstuffs, as well as air and gas. Accurate and with a robust probe, HI 146 can be simply installed in a fixed position utilizing the molded eye and the probe holder. In addition, it can be hung with a lanyard right where it is most needed. This way, the meter can continuously monitor and display the exact temperature of products.

Ordering Information

HI 146-00, °C readings, is supplied complete with batteries and instructions.

HI 146-01, °F readings, is supplied complete with batteries and instructions.

Accessories

HI 750146 Wall-mounting probe holder for HI 146

For detailed information about this product, see page C16.

HI 149 High Temperature with Interchangeable Probes


HI 149 is a pocket thermometer for routine checks in the food industry. It provides an extensive measurement range from -40°C to 300°C (-40 to 572°F). Thanks to this and its user-replaceable probe, it can be used in an equally wide range of applications. You have a choice of four probes, specifically manufactured to measure the temperature of liquids, air, surface, solids and semi-solids. This way you can match the meter to your application as well as changing the probes without requiring calibration.



Probes for HI 149


PROBE EPW

Probe with sharp tip

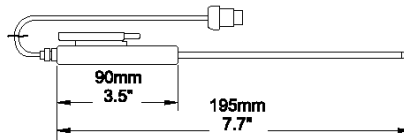


PROBE ELW

Probe for general use/liquids

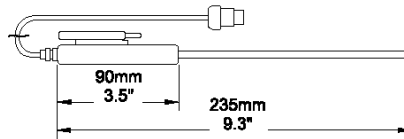


PROBE ECW

Probe for air and gas

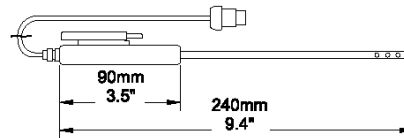

PROBE EMW

Surface probe

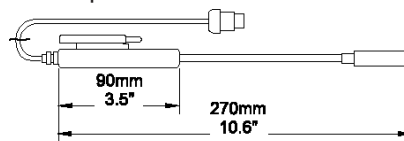

Specifications

HI 149-00	
Range	-40 to 300°C
Resolution	1°C
Accuracy	±2°C
Probe	interchangeable, stainless steel, 1 m cable
Battery Type	3 x 1.5V
Life	approx. 700 hours of continuous use
Environment	0 to 50°C (32 to 122°F); RH max 95%
Dimensions	106 x 68 x 21 mm (4.2 x 2.7 x 0.8)
Weight	80 g (2.8 oz.)

Ordering Information

HI 149-00, °C readings, is supplied complete with batteries and instructions.

HI 149-01, °F readings, is supplied complete with batteries and instructions.

Accessories

PROBE EPW	Penetration probe
PROBE ELW	General purpose/liquid probe
PROBE ECW	Air/gas probe
PROBE EMW	Surface probe